



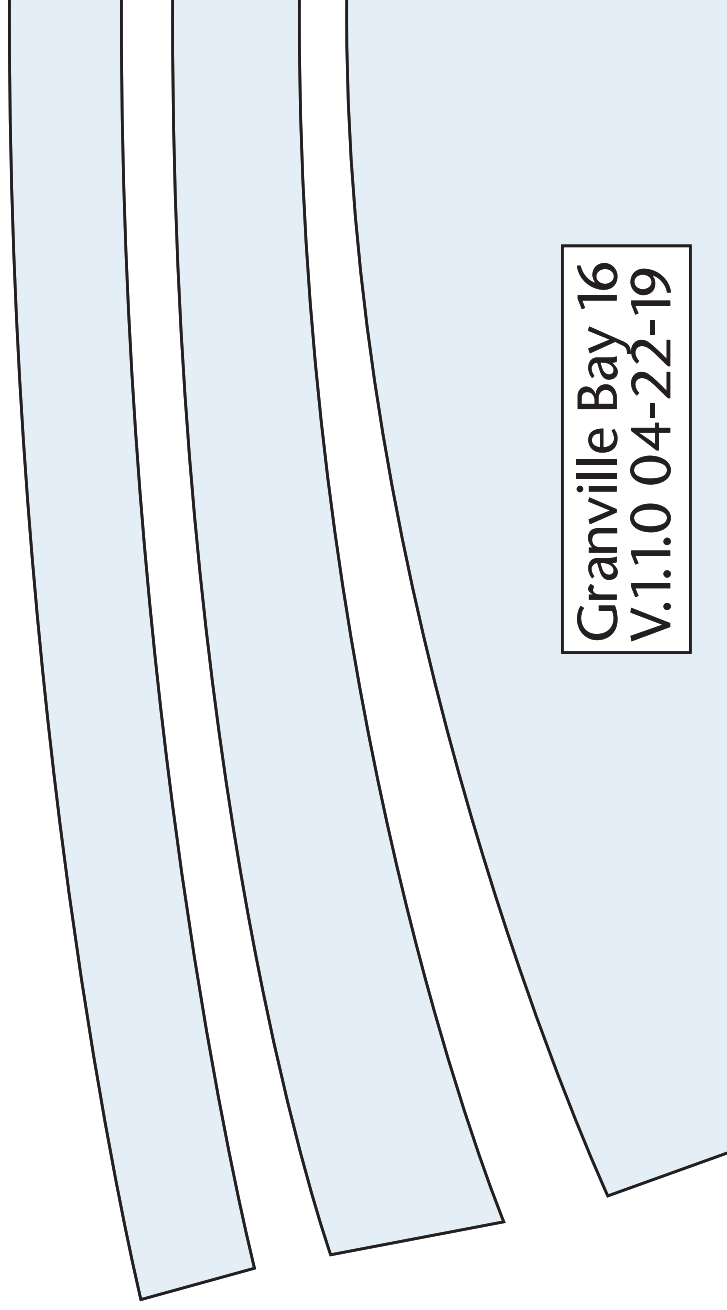

Granville Bay 16
V.1.1.0 04-22-19




Cut along dotted line and
fold into a triangle.

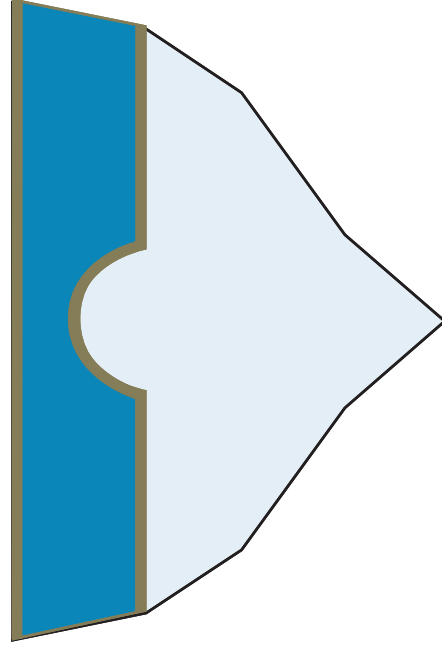

Beam Spreader



Place Beam Spreader at Arrows
to set the beam of the model.
Wrap a string around it to hang.

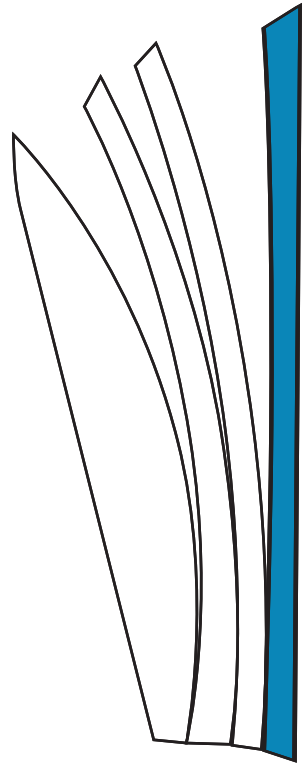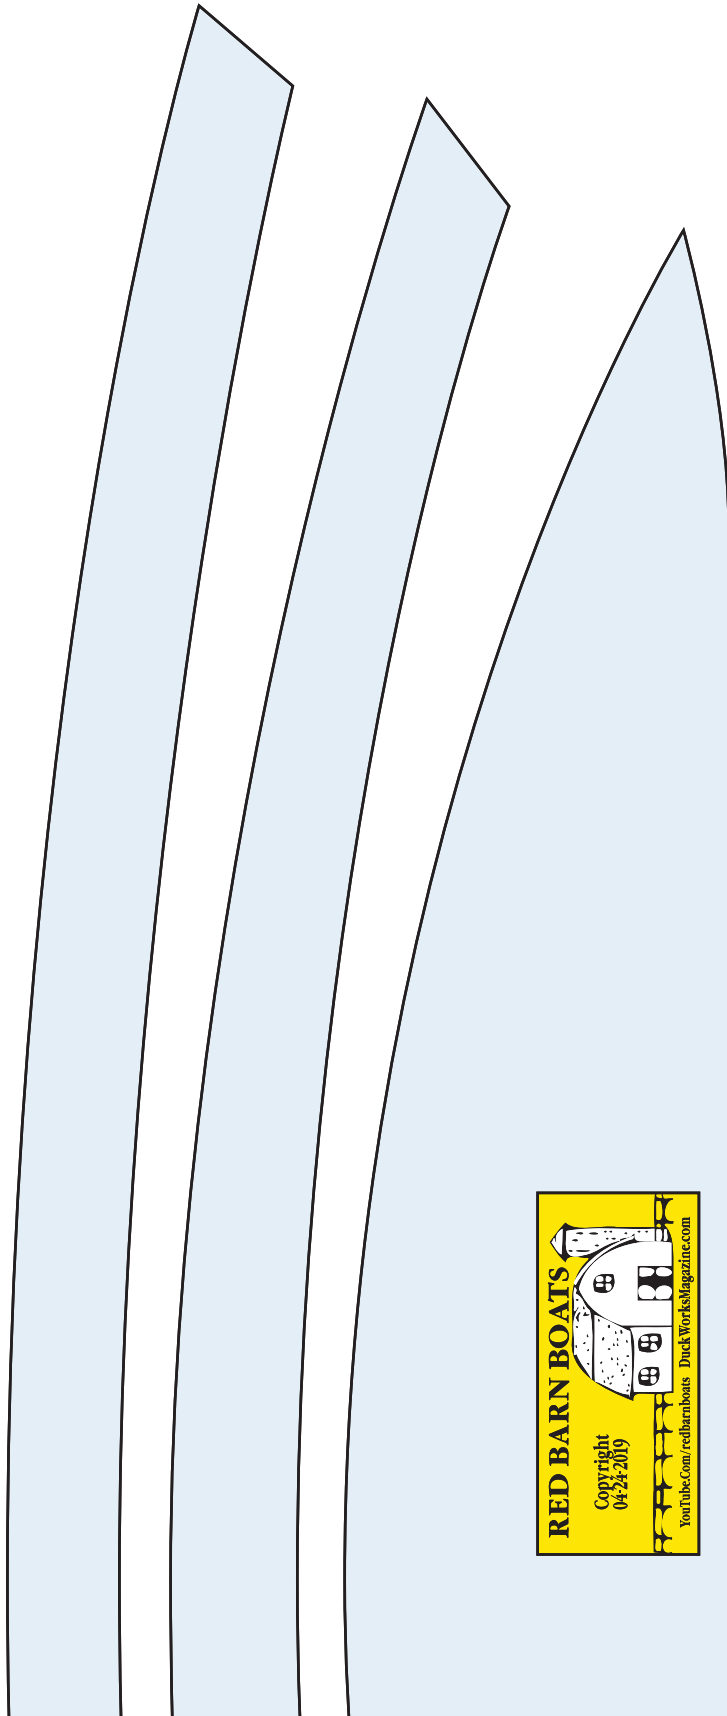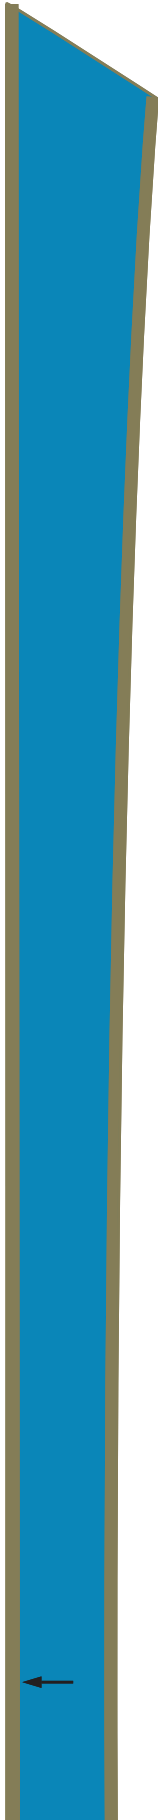

To Assemble:

Start with one side first.

Line up the ends of panels

3&4

4

Tape the ends and then every 1/2" to the bow.

Line up ends of 2&3 and tape to bow.

Line up ends of 1&2 and tape to bow.

Now do the other side the same way.

Line up the ends of the

2

two halves and tape towards the bow, but

stop about 2" from the bow.

Then tape the bow ends

of panels #1 together,

1

then 2's, then 3's.


Pull the opening at the


bow together on the

outside and tape. Pull the

rest of the gap shut on the outside, and

then tape the inside.!

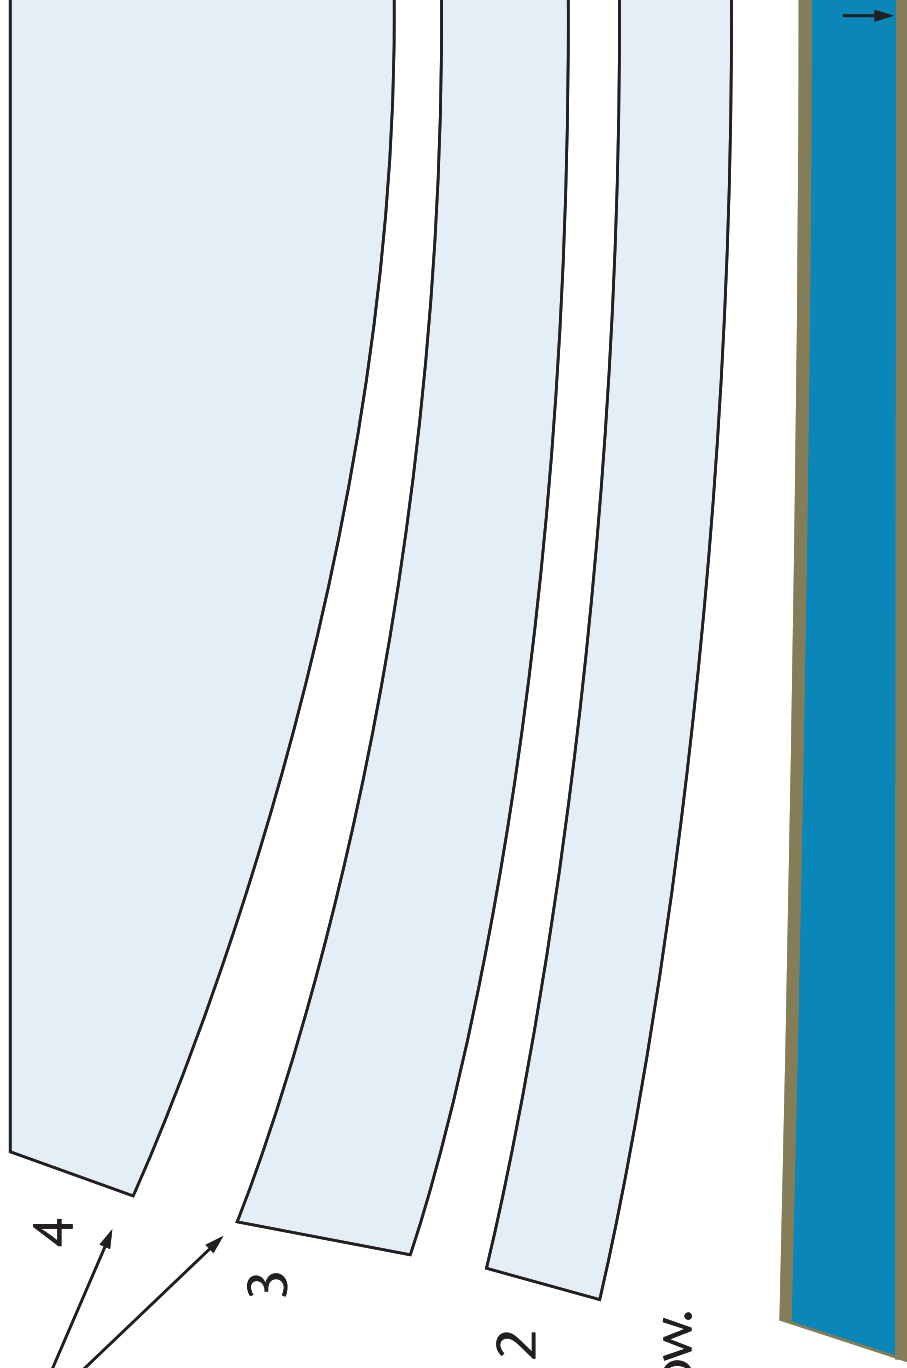

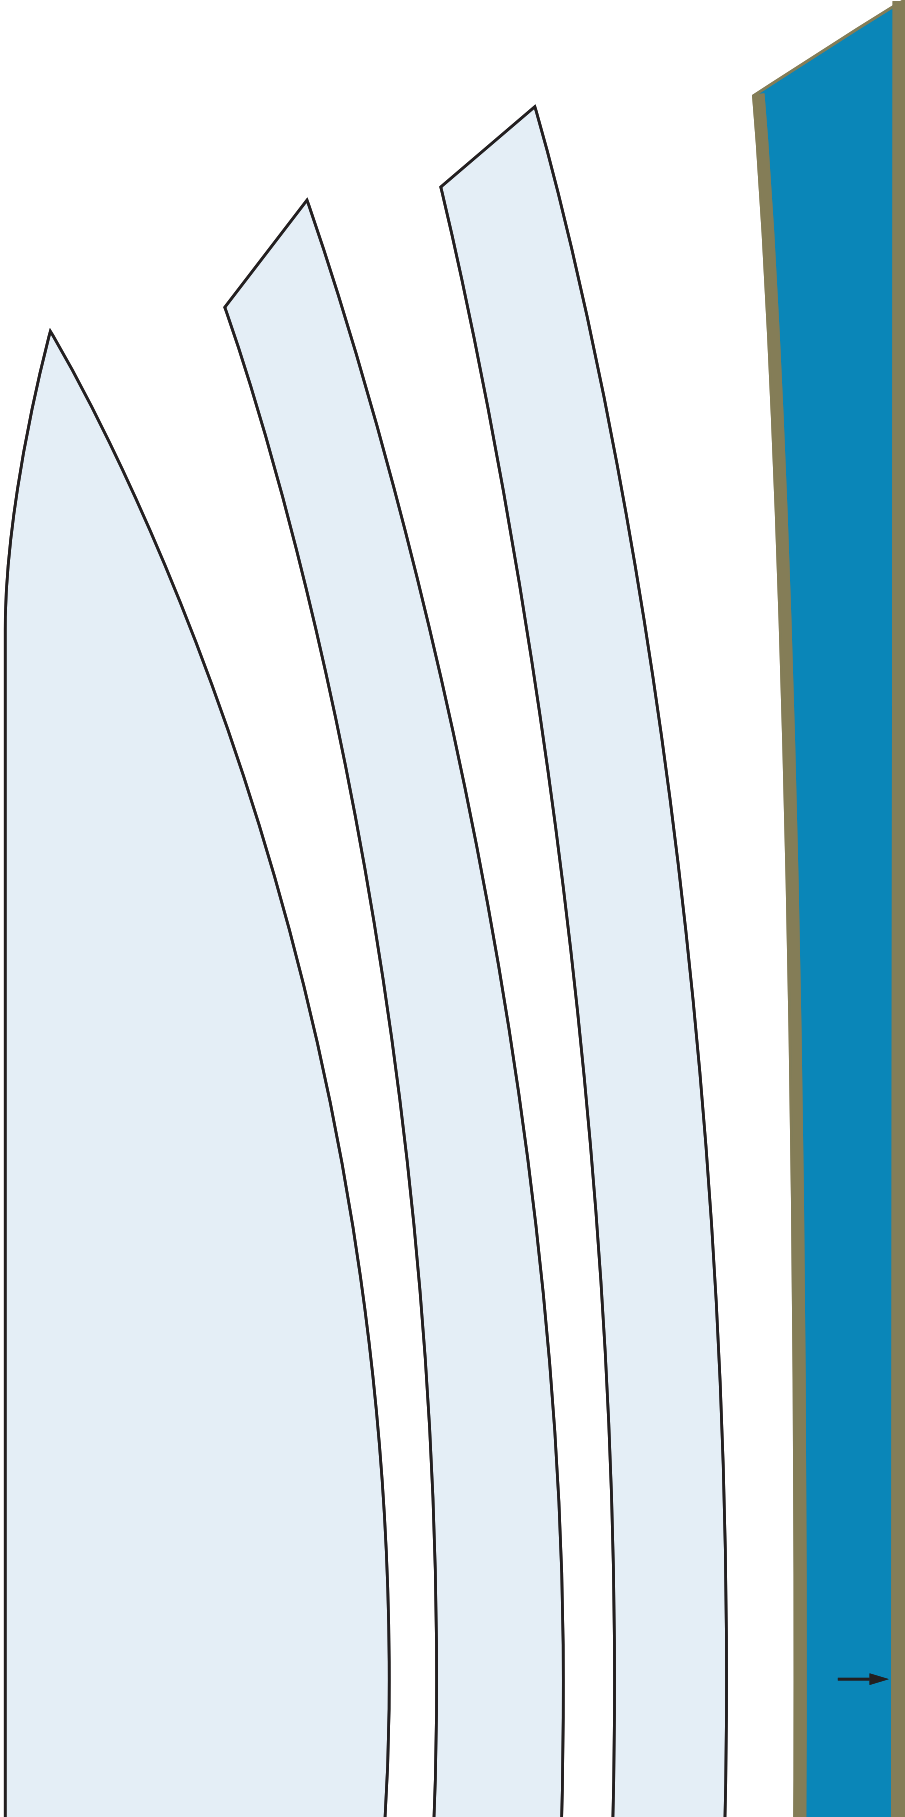

Line up the top of the transom panel with the top panel of either side and tape on the outside with clear tape, then on the inside with masking tape. Then go to the other side and do the same. Then tape the ends of the 2nd panels, then the 3rd panels, and finally pull in the ends of the bottom panels. Tape all inside edges with masking tape.