




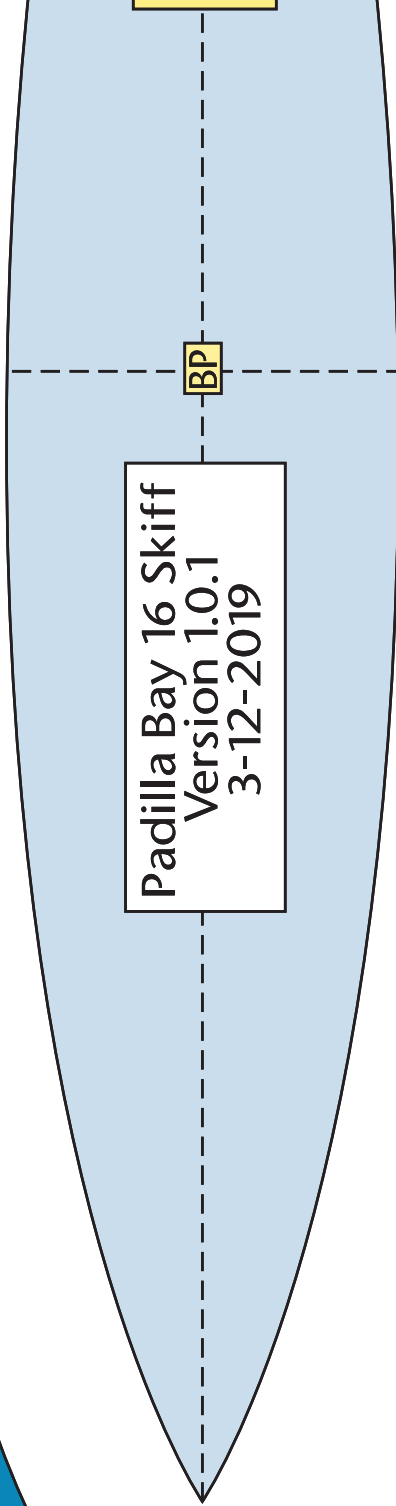


Padilla Bay 16 Skiff
Version 1.0.1
3-12-2019

BP


Balance Point of Bare Hull

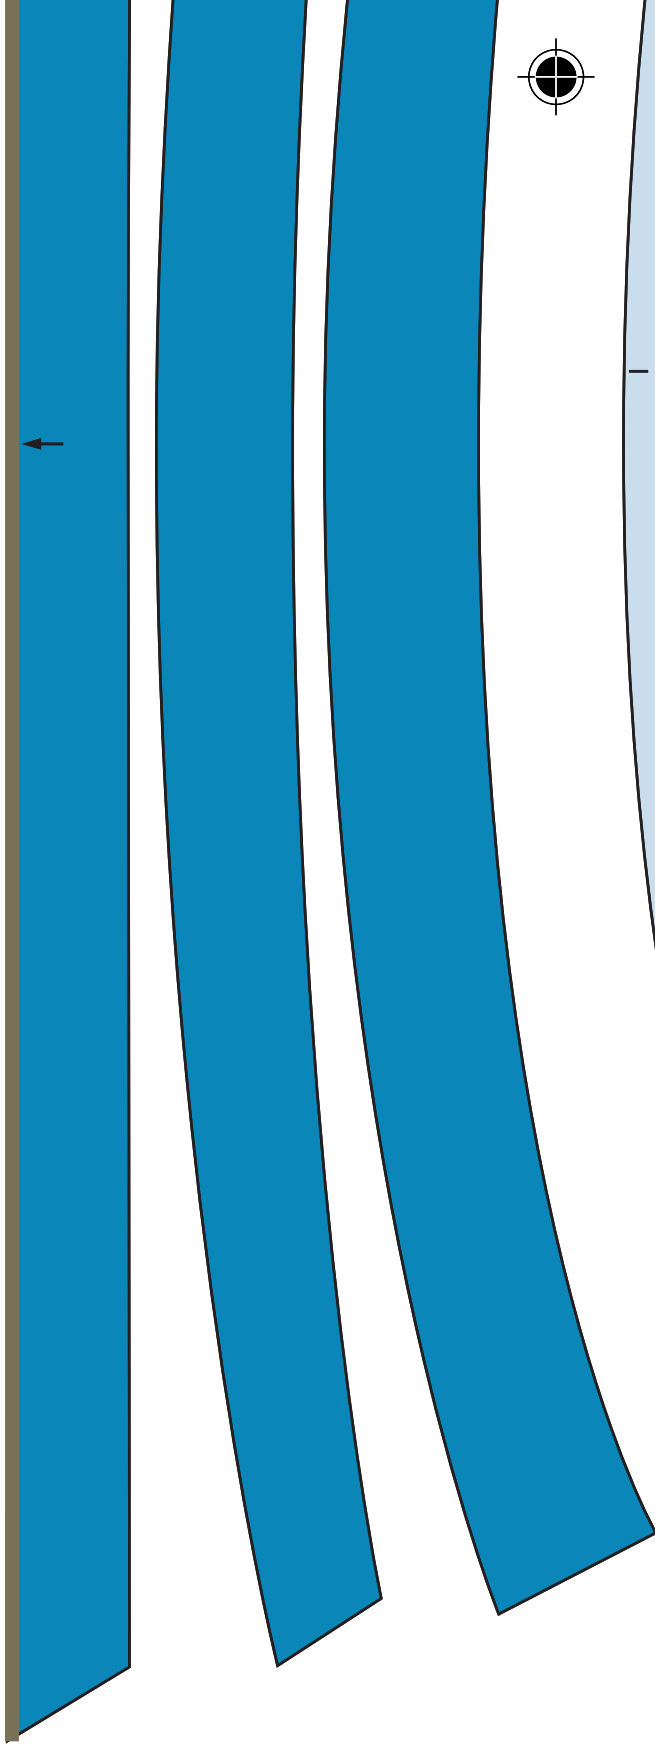

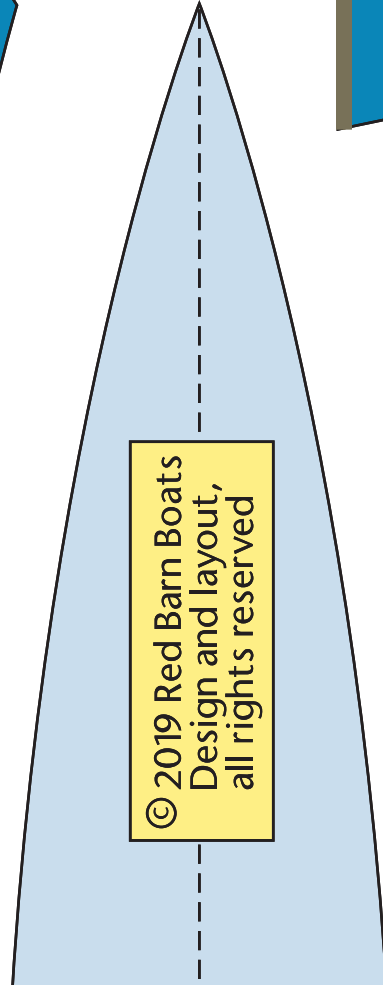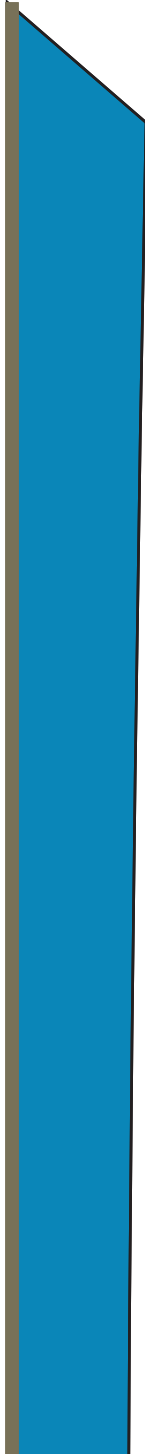


© 2019 Red Barn Boats
Design and layout,
all rights reserved

Hull bottom panel will be
two pieces that will be joined
after cutting out. It will be
a "butt seam/Payson Joint"

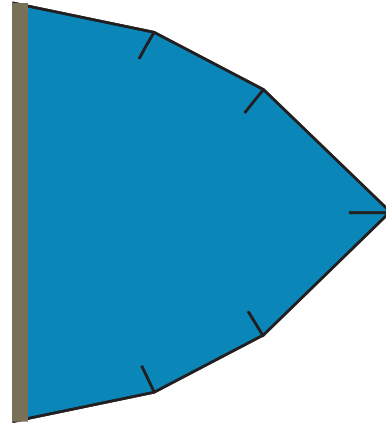

© 2019 Red Barn Boats
Design and layout,
all rights reserved



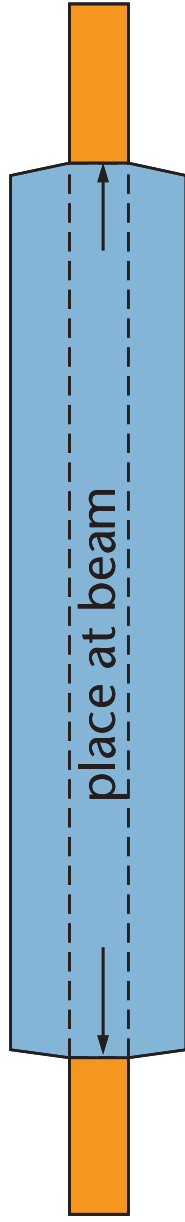

Paste to cardboard

Cut out


Fold along dashed lines

Tape bottom edges


Fold over end flaps

Tape flaps to inside of

top panels at the beam

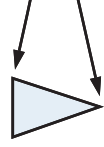


© 2019 Red Barn Boats
Design and layout,
all rights reserved

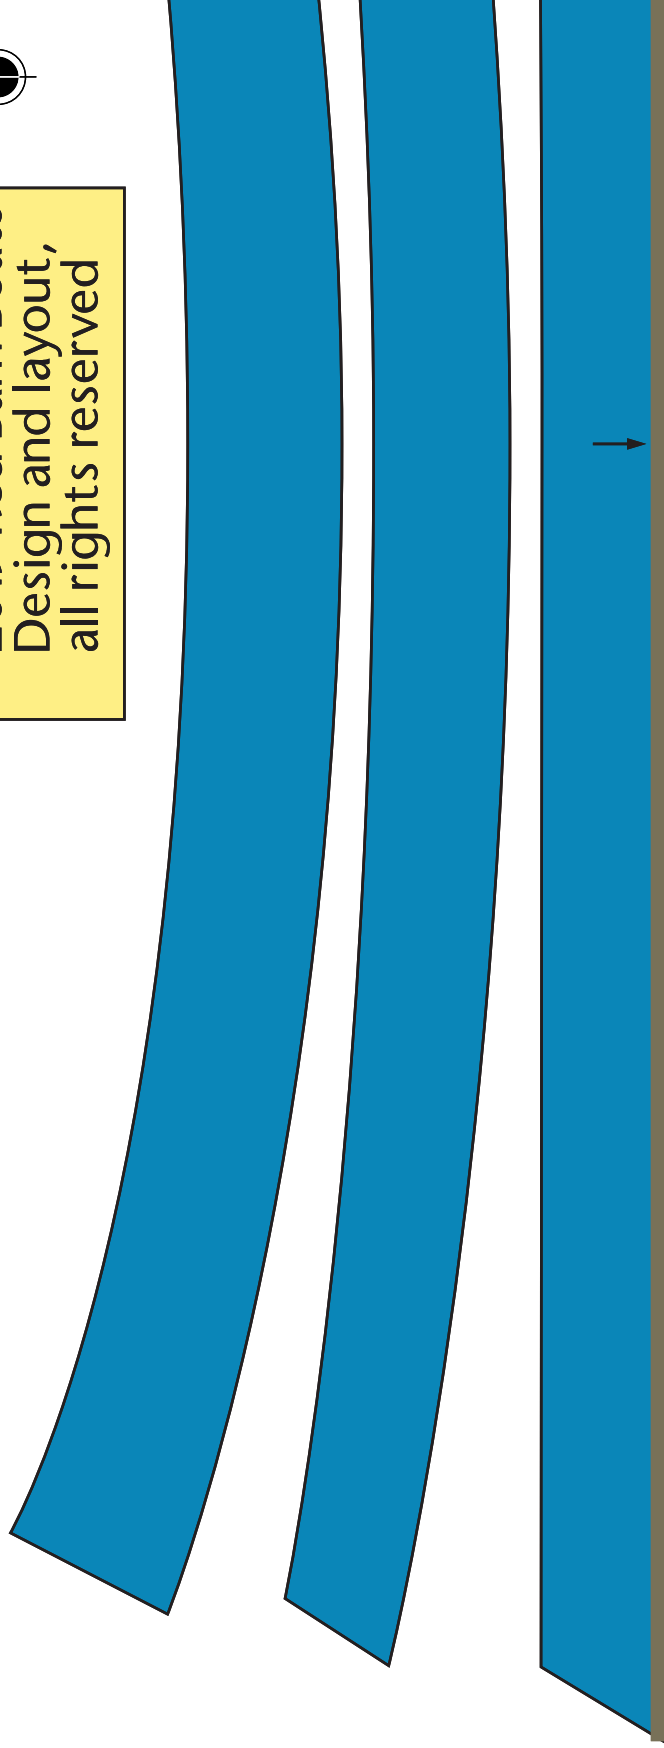



Pull together
every inch and
tape

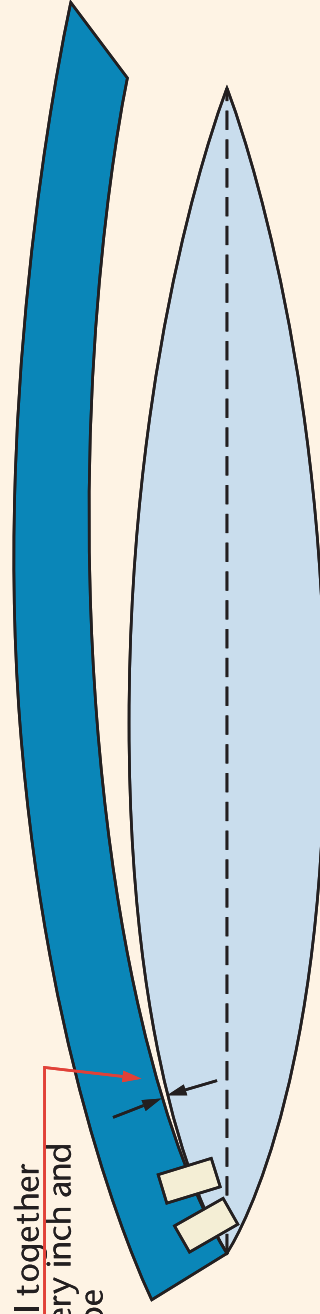

Align all panels at their stern ends, and tape forward while pulling in for each new piece of tape. This will keep the model's panels in line and will start them curving as you tape.

